
Uninterruptible Power Supplies

Unterbrechungsfreie Stromversorgungen Sistemas de alimentación ininterrumpida Gruppi di Continuità **Onduleurs**



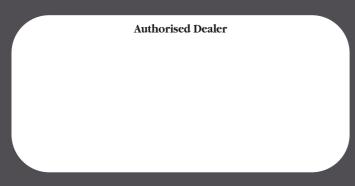

www.metasystem.it

MetaSystem S.p.A. • Via Galimberti, nº 8 42100 Reggio Emilia • ITALY Tel. +39-0522 364 111 • Fax +39-0522 364 921 info@metasystem.it

ITH QUALITY SYSTEM **— ISO 9001/2000 —**





www.metasystem.it









Quality



MetaSystem has been actively pursuing the path towards Quality for many years, confident that the future can only be tackled by way of optimum efficiency. The validity of the company's policy was confirmed by the certification of MetaSystem's Quality System to UNI EN ISO 9001 standards in 1996 (design - production - sales - service).

The additional certifications awarded by the world's leading motor vehicle manufacturers, as well as current upgrading to ISO 14000 standards, have contributed to the continuing enhancement of already high standards in production. Quality is not just an objective, therefore, but an essential prerequisite for the daily application of every resource.



Production premises for Power products



UPS production lines - 1989

Technology

MetaSystem has been manufacturing UPS for over 25 years and from the very outset the company motto was 'Our technology at the service of your safety'. This is why MetaSystem believes in on line - dual conversion technology, which safeguards the highest levels of protection; in actual fact, we were the first to launch modular, redundant UPS on the market back in 1993 with our HF series.



The continuity of operation guaranteed by redundancy and the assured expandability of modular technology opened new horizons in the use of UPS for critical applications.



UPS Production - 2002



2


Anechoic room - R&D building

SMD Production - 2003



On Line Dual Conversion

This is the only technology that provides a sure fire solution to any power supply problem caused by variations in the frequency or the amplitude of the input voltage. The decoupling of the output from



Block diagram - UPS On Line dual conversion

the input makes operation possible with a wide input voltage range, reducing the number of battery switchovers and allowing operation with gen-sets and frequency conversion. Thanks to the inverter, intervention time is nil because it is always on-line, so any transfer time is eliminated.



The modular architecture of electronics and batteries admits redundant configurations, simplified maintenance and the option of future expansion.




Modular



The MegaLines are modular in both power and autonomy

Redundant

Redundancy in terms of both the power modules and the batteries: rectifier, inverter and battery charger are all fitted on each of the power boards. Operating continuity is always guaranteed, even if one of the modules should fail, without any interruption or switchover, thanks to parallel load sharing (all the boards participate in the supply of power to the load). The level of redundancy is set via software using the display, to warn when redundancy, but not operation, may be endangered because of an increase in consumption.




If one board fails, the others share the load. The same principle goes for the batteries.

Programmable

Schedulin9 Schedul.Plannin9 Restart Shutdown All the operating data and UPS settings are readily accessible by way of the LCD panel. The operating parameters can be set in UPS Setup in order to optimise their application. It is also possible to programme UPS switch on, switch off and testing with a daily, weekly or monthly schedule, or on command. The LCD display is extremely user friendly, so that these operations are also accessible to the less experienced. Password protection, however, is envisaged.

Expandable


Easy to expand in power and autonomy thanks to the full modularity of the boards and the low voltage (36V) battery kits, enabling the battery operation time to be customised according to the specific application. All the models, even the single cabinet versions up to 5000 VA, can be easily connected to external battery cabinets without the need for any modifications thanks to the standard, plug&play-type connection.



If three boards are not enough, fit an extra one. The load is automatically redistributed




Operating principle

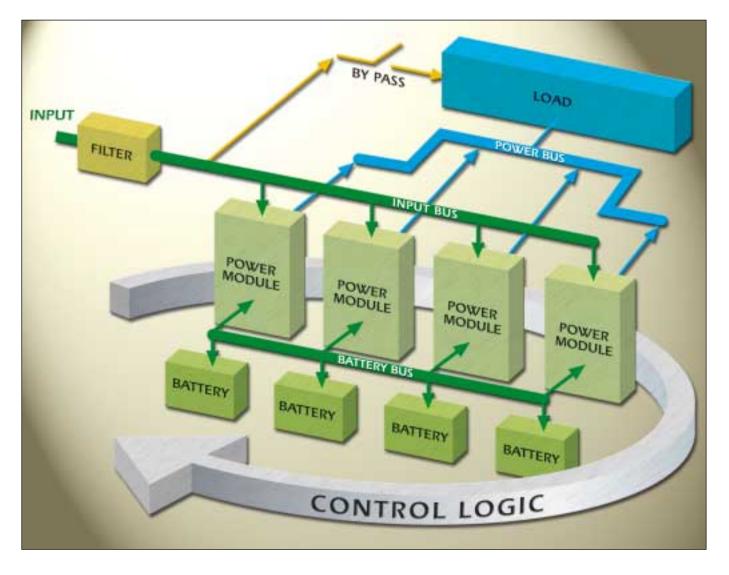

High uptime thanks to redundancy and load sharing

All the modules inside the MegaLines supply the load contemporarily, and all the batteries contribute to the supply of backup energy.


If one of the modules stops working, the others will all continue supplying the load without any interruption, redistributing the percentage of load that was previously supplied by the module now out of order. For example: redundant MegaLine 3750 N+1 supplying a load of 2250 VA. Each module supplies 750 VA. One module goes out of order. The others now supply 1125 VA each.

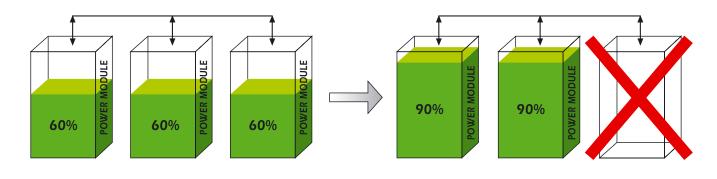



"PLUS"

- Input power factor > 0.99
- Input current harmonic distortion < 3%</p>
- Advanced expandability of autonomy
- Static bypass
- Class A/B (immunity/emission)
- Automatic sensing (in/out frequency)
- Plug & play for gen-sets
- Noise level < 40 dBA</p>
- Double IBC (intelligent battery charger)
- Long life battery control

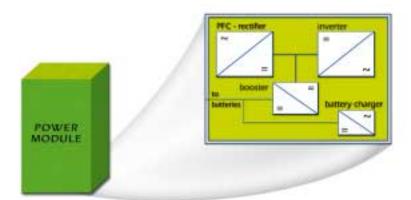

Each MegaLine power module is a true, on line dual conversion, with PFC rectifier - inverter - booster and battery charger. All the blocks of all the modules are in parallel, as are the batteries.



Modular

Modularity and total resource distribution lead to MegaLine UPS offering superior uptime.



Programmable

The LCD display makes all diagnostics data and programmable menus accessible without the need for a PC connection.









On line dual conversion

Sophisticated control logic makes certain that the performance of the MegaLines is at the top of their category.

Redundant & Expandable

In both power and back up. Boards and batteries can be easily added or removed, reducing the average downtime.



Not only do the MegaLines offer all the standard features of the best on line - dual conversion products, they also offer top-of-the class performance and functions. They are available in two families, with either a single or a double cabinet. The 4 single cabinet models can supply from 1250 to 5000 VA, and can house a maximum of 4 power boards and 4 battery kits. Additional batteries can be housed in bespoke cabinets that are easily connected up thanks to their standard presetting for the expansion of autonomy.



Effective acoustic and visual signals, even from a considerable distance High Frequency and high efficiency with a reduced footprint Static bypass External maintenance bypass (optional) Cold charging Real time confirmation of residual autonomy and charge status on the LCD display Input section: Input PF > 0.98 whatever the percentage of load

THD of input current < 3%

Wide range of input voltage and frequency

50 Hz or 60 Hz operating frequency with automatic identification

50 Hz in - 60 Hz out frequency conversion or vice versa

Extension of the input frequency range for operation with gen-sets DC start

Technical specifications	MegaLine 1250	MegaLine 2500	MegaLine 3750	MegaLine 5000				
Technology	On line dual conversion							
Nominal power	1250	2500	3750	5000				
Active power	875	1750	2625	3500				
Nominal input voltage	230 V							
Input voltage range	184÷264 V with 100% load - 100÷264 V with 50% load							
Input frequency		50 / 60 Hz ± 2	% autosensing					
Input current THD	< 3%							
Input power factor	> 0,99 from 20% of load on							
Nominal output voltage	230 V ± 1%							
Nominal output frequency	50 / 60 Hz synchronized							
Output voltage THD	< 1%							
Batteries	3 pcs 12 V 9 Ah seald, lead-acid, maintenance free batteries each power board							
Batteries number	3	12						
Back up – 80% load	11							
Back up – 50% load	20							
Bypass	Static + electromechanical - zero transfer time							
Overload capability (mains mode)	150% for 30 sec 200% for 5 sec. Without bypass intervention							
Acoustic noise @ 1m	40 dBA							
Net weight (Kg)	23,5	34	43	53				
Size (l x h x d) mm	270 x 475 x 570							
Reference standards	EN 50091-1-1, EN 50091-2, EN 50091-3							
Installed power boards	1	2	3	4				
Available power slots	3	2	1	-				
Installed battery kits	1	2	3	4				
Available battery slots	3	2	1	-				
Battery charger slots	1 - in dedicated battery cabinet (optional)							



The 5 double cabinet models can supply from 5000 to 10000 VA. They can house a maximum of 8 power boards, each supplying 1250 VA, and 10 battery kits in their bespoke cabinet, which also provides space for 1 extra battery charger. Extra battery cabinets, identical to the standard one supplied, can be added for further expansion of the backup time.

Output section:

Eco mode operation (energy saving)

- Load-waiting mode operation (protection on demand)
- Output voltage can be adjusted in 1-volt steps on the front panel Low noise levels
- Measurement of internal and external temperatures
- Ventilation control based on temperature and load
- Preset for remote emergency switch-off

Class A/B (immunity emission)

All the MegaLine models comply with the most stringent standards in terms of both **emission** and **immunity** to electromagnetic interference, so that they can be used for any application, in either civil or industrial environments

Shutdown software can be downloaded free of charge off our website



Technical specifications	MegaLine 5000/2	MegaLine 6250/2	MegaLine 7500/2	MegaLine 8750/2	MegaLine 10000/2			
Technology	On line dual conversion							
Nominal power	5000	6250	7500	8750	10000			
Active power	3500	4375	5250	6125	7000			
Nominal input voltage	230 V							
Input voltage range	184÷264 V with 100% load - 100÷264 V with 50% load							
Input frequency		50 /	$60 \text{ Hz} \pm 2\%$ autose	nsing				
Input current THD	< 3%							
Input power factor		> 0,99 from 20% of load on						
Nominal output voltage		230 V ± 1%						
Nominal output frequency	50 / 60 Hz synchronized							
Output voltage THD	< 1%							
Batteries	3 pcs 12 v	V 9 Ah seald, lead-a	cid, maintenance fre	ee batteries each po	wer board			
Batteries number	12 15 18 21							
Back up – 80% load	11							
Back up – 50% load	20							
Bypass	Static + electromechanical – zero transfer time							
Overload capability (mains mode)	150% for 30 sec 200% for 5 sec. Without bypass intervention							
Acoustic noise @ 1m	40 dBA							
Net weight (Kg)	24 + 50	26,5 + 57,5	29 + 65	31,5 + 72,5	34 + 80			
Size (I x h x d) mm	270 x 475 x 570 x 2 cabinets							
Reference standards	EN 50091-1-1, EN 50091-2, EN 50091-3							
Installed power boards	4	5	6	7	8			
Available power slots	4	3	2	1	-			
Installed battery kits	4	5	6	7	8			
Available battery slots	6	5	4	3	2			
Battery charger slots	1 - in dedicated battery cabinet							

▶UPS Status UPS Setup Events Scheduling 4

The LCD display provides various information, ranging from basic data such as the name of the model, its power rating, the version of the software and its serial number, to more advanced information concerning the input and output sections, the batteries ... these can be found in the various submenus in the UPS INFO menu.

UPS Info Mod Megaline 3750 POut max 2625W SW Ver 1.074


Input

Information




The submenu in the INPUT section keeps the user informed as regards all the sensitive data concerning UPS operation without the need to connect up any software.

The active and apparent input power, the effective voltage and current,



the frequency, the crest factor and the power factor can be consulted at any time during mains operation by simply navigating in two menus.

Output




Similar information to that provided for the input section is also available for the OUTPUT section.

The data shown on the first screen (the display is scrolled down vertically to enable access to all the information provided) is especially important

Output	
I RMS	4.1AT
Peak Current	6.1A
Peak Current Frequency 49	9.91Hz4

for precise monitoring of load levels and thus the prevention of complications, such as overloads.

Batteries



Battenies	ATT DESCRIPTION OF	
Voltage Residual	40.10	
Discharge		

The BATTERIES menu provides important information both concerning the current status of the batteries (charging voltage, residual capacity) and also a battery log. The number of complete discharges, the hours of use, the type of calibration in use, any autonomy expansion kits or extra battery

chargers fitted, are all fundamental parameters when assessing the life and usage of the batteries and for scheduling their replacement.

The calibration of the batteries, set in the TOOLS menu, is needed for acquiring the typical discharge parameters for

the batteries in use. It can be executed on command or planned as part of a regular schedule. The UPS updates it automatically each time the batteries are fully discharged. The advantage of calibration, used for the calculation of the autonomy and the recharge time, is that it takes a large number of factors into consideration, even those relating to the environment such as the impact of temperature and age.

Setup software

Programming

With the MegaLine's LCD display, it is very simple to schedule the automatic switching on and off of the UPS, without the need to connect up a computer. Even battery calibration and testing can be scheduled. A total of 16 programming events can be stored in its memory. The events can take place:

- √ Daily
- √ Weekly
- √ Monthly
- √ On command

so that each individual type of event can be managed with total flexibility (e.g. regular on/off but occasional calibration).

Bypass

The BYPASS can also be scheduled to operate in a variety of ways:

- $\sqrt{}$ Off line energy saving
- $\sqrt{}$ Load waiting– the UPS switches on when the load exceeds the threshold that is set on the panel

 $\sqrt{}$ Forced bypass– the UPS is excluded from the system The delay before intervention can also be adjusted to allow for repeated peaks of consumption by the load by modifying the speed of the dipswitch (e.g. for laser printers or photocopying machines).

Backup

The method used to manage autonomy can be customised according to the requirements of the particular application. It is possible to choose between time-based management or management based on the battery voltage threshold.

For example, with time-based management, it is possible to set the time limit for battery operation or the maximum operating time after the reserve signal (UPS close to battery exhaustion). With voltage threshold management, the thresholds can be adjusted to safeguard optimum or customised use of the available resources. EXTERNAL OPTIONS is used for the recognition of expanded autonomies or additional battery chargers.


Output configuration


The output voltage can be adjusted in 1-Volt steps whereas the frequency can be set to a fixed value, separate from the input, or left free to synchronise with the input. With fixed frequency, the MegaLine can be set for operation as a frequency converter. Redundancy N+X, on the other hand, is a warning function: if parameter X=1,2 etc is set, the power of one module is reserved exclusively for redundancy and a warning signal is provided should the load exceed the power available. For example: MegaLine 3750 - Redundancy N+1 - load 2100 VA.

1250 VA of the available 3750 VA is redundant whilst the remaining 2500 VA is for use by the load. Should the load increase in excess of 2500 VA, the UPS will warn that redundancy is no longer available. It will, however, continue to supply the load correctly.




R+x Redundancy







attery Calibration



BULLE

17:00

01/16

19:00

Ster

TurnOff

Jeekly

ALA PARA

En1

er N.

fonthly

Battenies		
▶Capacity	Manag.	1
Reservel	Time	
Max Time		4
and the second second second		

Alarms and signals





An acoustic signal and high-visibility flashing on the backlit front panel ensure that any alarm signal is noticed immediately.

The signals can be divided up into various categories based on their severity:

Normal Operation – Fixed Green

Normal operation, no anomaly.

Battery Mode – Flashing Yellow

 Battery operation, accompanied by a slow, intermittent acoustic alarm signal, which can be silenced.

Severe alarm - Fixed Red (accompanied by an acoustic alarm signal)

- Operation blocked
- Anomalies concerning the output voltage

Warning - Flashing Red (accompanied by an acoustic alarm signal)

- Failure of one or more power modules
- Incorrect connection of neutral on input
- Overload

The events log can be accessed from the front panel and can store up to 192 successive events, complete with the date and time they took place.


Self-diagnostics and the memorisation of events facilitate the identification of hardware faults or anomalies in UPS operation (overload, high temperature, etc.), thus making it possible to solve any problems much quicker. The internal clock is adjusted by default and also manages daylight saving / standard time changes automatically.

GSM Telediagnostics

The GSM interface module features two operating modes:

- Alarm
- Control

In alarm mode, the UPS uses the GSM interface to call the preset numbers and commence data or SMS transmission. This can be used to receive alarms from the UPS and then to interrogate it, giving it orders depending on the type of alarm signal received.

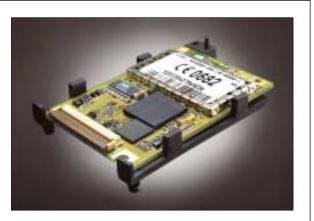

In control mode, the GSM module acts as a modem, allowing the UPS to be called from a distance and then executing information polling in order to verify its operating status at regular intervals and to carry out programming via SMS or data connection.

The GSM module is interfaced using a dedicated port; it does not, therefore, compromise the use of either the RS232 serial port or of the two logic level interfaces on the UPS.

Battery Mode Operation

Examples of Expanded Autonomies with 80% load

Battery Mode Operation

A slow intermittent acoustic signal, which can be silenced, and high-visibility yellow flashing of the entire front panel informs the user that the UPS is operating in battery mode.

During the discharge stage, the MegaLine indicates:

- $\sqrt{}$ The percentage of residual charge
- $\boldsymbol{\sqrt{}}$ The amount of autonomy time actually remaining
- $\sqrt{}$ Output power and voltage

When the MegaLine is recharging, it indicates the percentage of charge that is actually available.

More expert users have the option of setting the mode for the exploitation of the backup energy based on battery voltage thresholds, predetermined operating time limits or according to the Status Of Charge of the batteries.

Model Autonomy	15′	30′	45′	60′	2h	3h	4h	8h	Accessories
	1	2	3				3		KB MegaLine/1
MegaLine 1250				4	7	10	10	25	KB MegaLine/2
				1	1	1	1	3	Batt MegaLine
								2	MegaLine Splitter
	1								KB MegaLine/1
Magalina 2500		3	5	7	14	20	26	49	KB MegaLine/2
MegaLine 2500		1	1	1	2	2	3	5	Batt MegaLine
					1	1	2	4	MegaLine Splitter
	2				1				KB MegaLine/1
Magalina 2750	1	5	8	10	20	30	39	73	KB MegaLine/2
MegaLine 3750		1	1	1	2	3	4	8	Batt MegaLine
					1	2	3	7	MegaLine Splitter
	2	6	10	14	28	40	52	97	KB MegaLine/2
MegaLine 5000	1	1	1	2	3	4	6	10	Batt MegaLine
				1	2	3	5	9	MegaLine Splitter
	2	6	10	14	28	40	52	97	KB MegaLine/2
MegaLine 5000/2			1	1	3	4	5	10	Batt MegaLine
			1	1	3	4	5	10	MegaLine Splitter
	2	7	12	17	34	50	65	121	KB MegaLine/2
MegaLine 6250/2		1	1	2	3	5	6	12	Batt MegaLine
		1	1	2	3	5	6	12	MegaLine Splitter
	3	9	15	20	41	60	78	145	KB MegaLine/2
MegaLine 7500/2		1	2	2	4	6	8	15	Batt MegaLine
		1	2	2	4	6	8	15	MegaLine Splitter
	3	10	17	24	48	70	91	170	KB MegaLine/2
MegaLine 8750/2		1	2	3	5	7	9	17	Batt MegaLine
		1	2	3	5	7	9	17	MegaLine Splitter
	3	12	20	27	55	80	104	194	KB MegaLine/2
MegaLine 10000/2	1	1	2	3	6	8	11	20	Batt MegaLine
	1	1	2	3	6	8	11	20	MegaLine Splitter

Expanded autonomies



Scalability - Expanded Power - Increasing redundancy - PW1250



All the models (except for the MegaLine 5000 single cabinet and the MegaLine 10000 double cabinet) can be increased in power in order to satisfy the requirements of the user. Installation is very simple. Expanding power: the additional board must be fitted along with an extra battery kit. Increasing redundancy: the board can be fitted without the corresponding kit of batteries*.

Scalability - Expanded Autonomy - KB MegaLine/1 - KB MegaLine/2

All the MegaLine models can be expanded in autonomy by fitting kits of 3, 12V - 9Ah batteries inside their battery cabinet (max. 4 in the single cabinet, max 10 in the battery cabinet of double cabinet models) or in additional battery cabinets.





Additional battery cabinets - Batt MegaLine

It is possible to connect additional battery cabinets (optional) in parallel in order to expand autonomy using the bespoke MegaLine splitter cables. There is no theoretical limit to the number of cabinets that can be connected given the low battery voltage of the MegaLine range. In fact, with the 36 V kits it is possible to create a parallel of batteries with many legs, increasing the degree of redundancy of the system.

Additional Battery charger - CB36

An additional CB36, 7A battery charger can be fitted inside the dedicated housing in the battery cabinets. This reduces the overall recharge time and is particularly useful when a large number of extra battery kits have been fitted.






Manual maintenance bypass - BP/1 - BP/2

The manual maintenance bypass makes it possible to remove the UPS from its original application without interrupting the power supply to the load so that it is possible to complete any job that needs to be done with the UPS switched off: maintenance, upgrades, and expansions of power or autonomy. It replaces the rear connector and can be easily disconnected from the UPS. Available in two versions for the single (BP/1) or double cabinet (BP/2).

Relay Interface

The interface is used to signal the operating status of the MegaLine range of UPS by opening or closing the insulated contacts of a relay. The interface indicates mains operation, battery operation, low batteries (autonomy reserve) and anomaly (overload or internal anomaly). Maximum capacity of the relay contacts: 1A (150Vdc or 125Vac).



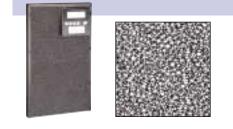

Air filter

It is possible to fit an air filter inside the front grill of the MegaLines for applications in critical industrial environments in order to prevent dust or small objects being sucked up inside the UPS. The lapse between the internal and external temperatures is measured and is used to signal when the filter must be cleaned. This information is provided automatically by the LCD display.


Shutdown software

Diagnostics and shutdown software can be downloaded free of charge from the website www.metasystem.it and gives access to all the MegaLine's operating data (also visible via the LCD display). It is also possible to adjust and set the special functions and to control shutdown of Windows and Linux operating systems.

UPS Communicator is complete with an in-line help function and operates as a service.

UPS Communicator communicates and controls, connected to the serial port, leaving the USB interface free for applications that require higher communication speeds.

UPS Communicator manages the shutdown of the local server and uses remote management modules to control the shutdown of servers connected via TCP/IP, even in a heterogeneous network, managing the transmission of alarm messages to users and enabling remote monitoring of connected UPS.

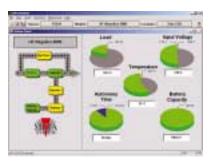

Our optional UPS SuperviSor shutdown software is available on CD-Rom and is able to manage the controlled shutdown of any operating system in heterogeneous network environments (Windows, Novell, Linux, most Unix).

Its advanced networking functions can manage a hierarchy in multi-server shutdown and remote UPS management, even via the Internet.

Service

The benefits of MegaLine technology are extremely important for servicing.

The MegaLine's modularity makes it possible to offer efficient technical service directly on site with truly minimum inconvenience for the user and for the applications protected by the UPS (if a manual bypass is fitted, servicing is completely transparent for the load).

The module-based structure and the ease of replacing all of the boards reduce downtime to a minimum. Typical downtime is less than 10 minutes.

MetaSystem UPS Configurator

The MetaSystem range also comprises other types of UPS, including modular and redundant On Line Double Conversions, and racks. To select the right UPS for each application, MetaSystem provides a UPS Configurator on its website: a programme that guides your choice with the best UPS for various applications and that makes it possible to customise the configuration of the autonomy of all the expandable models (based on the load and the selected model).

